

KEY:

LOAD SELECTION

- Decrease Load
- Increase Load
- 0** Manual Load Entry
- OK
- Apply Load
- Reject Load

NAVIGATION

- Next Screen
- Down Screen
- Back Screen
- Network Overview
- Network Search
- Settings
- Status - Load Off
- Status - Load On
- Status - Warning
- Status - Error
- 1:** 0/100 kW Single Load Bank Control

OTHER SYMBOLS


- #1** Load Bank ID (Network view only)
- USB Found




WARNING!

Read the load bank manual before use and take special note of all safety warnings. Keep people well away. Close all doors. Ensure cables and earthing are adequate. Ensure a 4m gap is between load banks to prevent hot air recirculation. Risks include fire and burns from the hot air outlet and electric shock.


Load Control

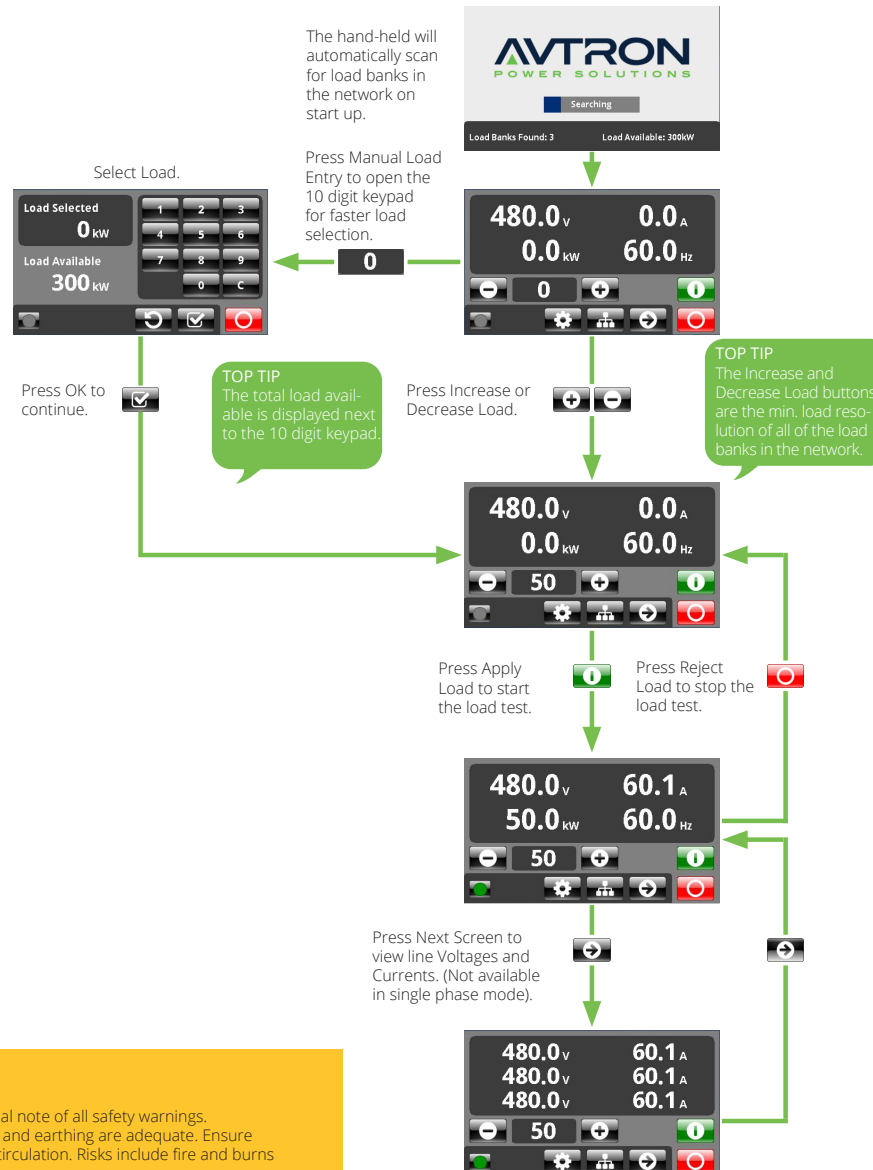


Data Logging

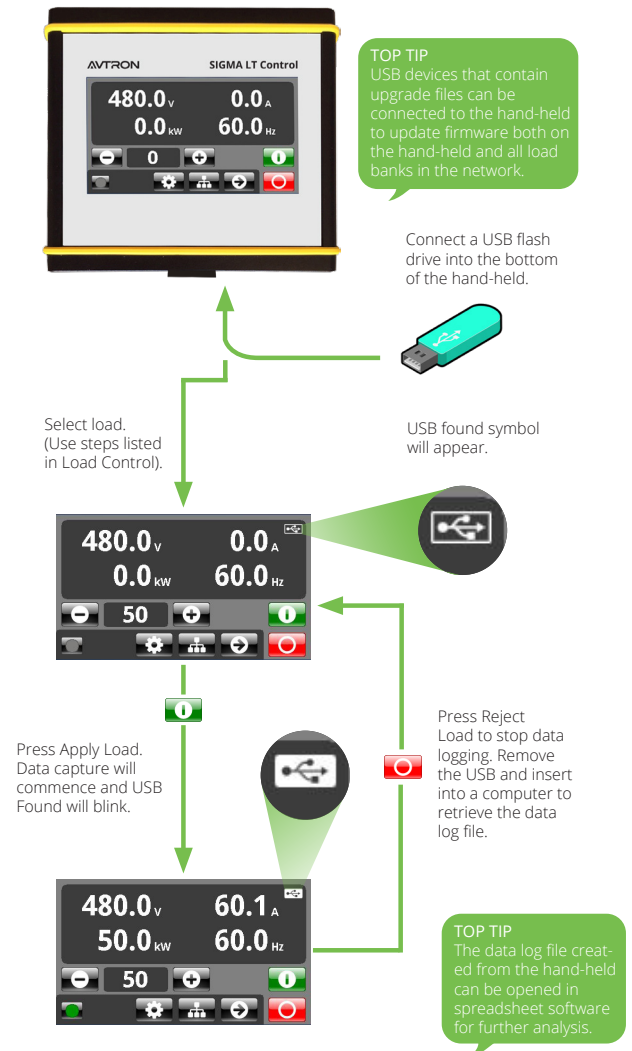

Load Banks in a Network

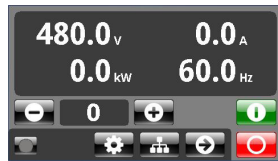


Press Network Overview to view all of the load banks in the network.

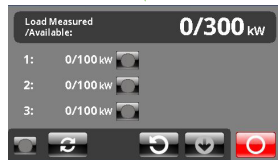


TOP TIP
Press Network Search to rescan for load banks.

Press a Single Load Bank Control.

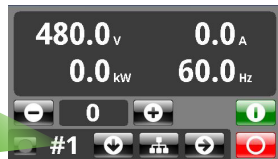

The Load Bank ID is shown on the bottom bar.


Press Down Screen to move through load banks in the network.

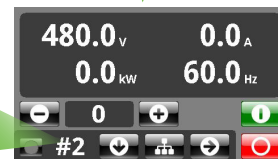


TOP TIP
The remote LED on the selected load bank will blink.

Repeat the Load Control steps to apply and reject load and view instrumentation for any load bank in the network.


Status

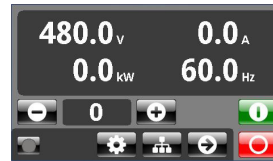

Press Status. See Key for colour codes.

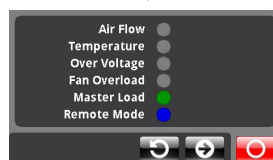


Press Next Screen to view the event log.

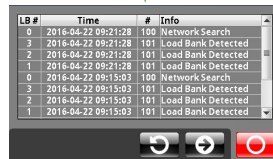


Up to 250 events are logged. After 250 events occur the data is overwritten.

TOP TIP
Status and logs are available for both individual load banks and the load bank network.

Settings

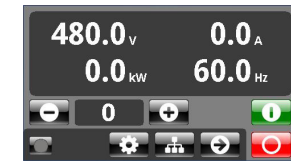


Press Settings.

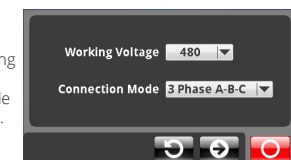

Select the working voltage and the connection mode from the menus.


Press Next Screen to edit the language, time and date.

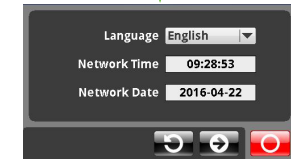

Set the date and time of all the load banks on the network for logging and data capture.

TOP TIP
Changing the Voltage will de-rate the load steps to ensure correct load is applied.

Error

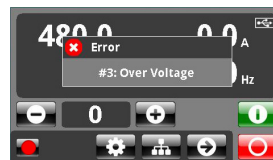

A message will appear if an error occurs. Press the screen to acknowledge. The load bank with the error will be removed from the network until it is cleared. For more information about errors view the load bank manual.