

## PORTABLE INDOOR RESISTIVE LOAD BANKS

MODELS LP400, LP500, LP600  
LP700, LP850 AND, LP1000



**IMPORTANT:** These instructions should be read thoroughly before installation. All warnings and precautions should be observed for personal safety, proper equipment performance and longevity. Failure to follow these instructions could result in equipment failure, serious injury to personnel, and/or property damage. Load Banks contain lethal voltages when connected to the power source. It is very important to remove all sources of power to the load circuits, resistors, blower motor circuits, and control circuits before installing, operating, or servicing this unit. Always allow adequate time after removing power before touching any system components.

**PROPRIETARY:** This document is the property of Trystar LLC, and shall remain so while in user's possession. The information is provided for the instruction, operation, maintenance and service of this equipment and not to be used for manufacturing or procurement of equipment from any source other than Trystar LLC. The technology shown here is strictly proprietary and is not to be disclosed to any 3<sup>rd</sup> party without prior consent and the express written permission of Trystar LLC.



## TABLE OF CONTENTS



|  |           |
|--|-----------|
| <b>1—SAFETY POINTS</b>                     | <b>1</b>  |
| Safety Precautions                         | 1         |
| Keep Away From Live Circuits               | 1         |
| Shock Hazard                               | 1         |
| Do Not Service or Adjust Alone             | 1         |
| Safety Earth Ground                        | 1         |
| Potentially Hazardous Operator Conditions  | 2         |
| <b>2—SAFETY SYMBOLS</b>                    | <b>3</b>  |
| <b>3—WARNING STATEMENTS</b>                | <b>4</b>  |
| <b>4—CAUTION STATEMENTS</b>                | <b>5</b>  |
| <b>5—LINGUAL GENERAL SAFETY STATEMENTS</b> | <b>6</b>  |
| <b>6—INSPECTION AND UNPACKING</b>          | <b>8</b>  |
| <b>7—PRODUCT OVERVIEW</b>                  | <b>8</b>  |
| Definitions and Formulas                   | 10        |
| <b>8—THEORY OF OPERATION</b>               | <b>10</b> |
| General                                    | 10        |
| Equipment Cooling                          | 10        |
| <b>9—ENVIRONMENTAL PARAMETERS</b>          | <b>11</b> |
| <b>10—EQUIPMENT INSTALLATION</b>           | <b>12</b> |
| Equipment Placement and Location           | 12        |
| Equipment Mounting                         | 13        |
| Power Connection Considerations            | 14        |
| Load Power Connections                     | 14        |
| Grounding                                  | 14        |
| Blower and Control Power Connections       | 15        |
| Operator Controls                          | 16        |
| Multi-Power Meter                          | 16        |
| <b>11—OPERATING INSTRUCTIONS</b>           | <b>17</b> |
| General                                    | 17        |
| Operation                                  | 18        |
| Safety and Shut-Down Indicators            | 20        |
| <b>12—MAINTENANCE</b>                      | <b>20</b> |
| <b>13—TROUBLESHOOTING GUIDE</b>            | <b>23</b> |
| <b>14—STORAGE</b>                          | <b>26</b> |

15—SHIPPING-----26  
16—CUSTOMER SERVICE -----27  
17—WARRANTY -----27  
18—ELECTRICAL AND MECHANICAL  
RATINGS -----28  
19—SPECIFICATIONS -----29  
20—PARTS LIST -----31  
21—APPENDIX - DRAWINGS AND  
MULTI-POWER METER QUICK  
START GUIDE -----37

## 1—SAFETY POINTS

### Safety Precautions

#### Safety Precautions:

The following instructions are general safety precautions that are not necessarily related to any specific part or procedure, and do not necessarily appear elsewhere in this publication. These precautions must be thoroughly understood and applied to all phases of operation and maintenance.

This manual contains various **Warning** and **Caution** statements. Personal injury or death may occur to an operator and/or technician if a warning statement is ignored. Equipment damage or hazardous conditions for personnel could result if caution or warning statements are ignored.

Carefully read and review this instruction manual, supplemental manuals, and all electrical schematic/interconnection drawings provided with the Load Bank prior to installation and operation.

### Keep Away From Live Circuits

#### Keep Away From Live Circuits:

Operating and Maintenance personnel must at all times observe normal safety regulations. Do not replace components or make adjustments to equipment with power turned on. To avoid casualties, always remove power to the entire system. Turn off and disconnect the mainpower source under test. Disconnect all sources of power to the Load Bank (Main input load bus, blower motor circuit, and 120 VAC control circuits).

### Shock Hazard

#### Shock Hazard:

Load Banks contain lethal voltages when connected to the power source. Power to the load resistors (main input load bus), power to fan motor circuits, and power to 120 VAC control circuits must be removed before servicing. Allow adequate time after removing power before servicing or touching any components.

### Do Not Service or Adjust Alone

#### Do Not Service or Adjust Alone:

Under no circumstances should any person reach into an enclosure for the purpose of service or adjustment of equipment except in the presence of someone who is capable of rendering aid.

### Safety Earth Ground

#### Safety Earth Ground:

An uninterruptible and approved earth ground must be supplied from the main power source. Serious injury or death can occur if this grounding is not properly supplied. Grounding of this equipment should be done by qualified personnel only and must be installed in accordance with all applicable national and local electrical codes and regulations.

### Chemical Hazard

#### Chemical Hazard:

No chemicals are included in the manufacturing or operation of this unit. There are no chemical hazards to consider.

### Emergency Aid

#### Emergency Aid:

Personnel working with or near high voltages should be familiar with

## Potentially Hazardous Operator Conditions

modern methods of resuscitation.

### Potentially Hazardous Operator Conditions:

- Read this manual prior to operation.
- Heavy duty caster wheels are provided for easy positioning and movement on a flat level surface only! Forklift channels are provided in the base for lifting and movement by fork lift truck on unlevelled surfaces. Never attempt to move the unit on a ramp, incline or any unlevelled surface as this could cause serious injury, equipment damage, and property damage. Always engage the caster locking brake mechanism when unit is in place and during operation.
- Always run an approved ground conductor from the load bank frame to the power source under test which in turn must be properly earth grounded.
- Do not operate the unit unattended. Access to an approved electrical fire extinguisher should be on hand at all times.
- Do not operate the Load Bank with access panels removed or doors open. Doing so would expose personnel to potential injury from electrical shock or from a moving fan blade.
- Careful consideration needs to be taken during installation and equipment location during operation. Hot exhaust air can cause damage to other installed equipment. Do not direct hot exhaust air in the direction of other installed equipment.
- Do not allow hot-air exhaust to recirculate through the cold-air intake.
- Do not allow objects to enter or block the cold-air intake or hot-air exhaust.
- Do not install any external cold-air intake or hot-air exhaust duct work to the Load Bank for ventilation. The Load Bank must be installed and operated in a cool, well-ventilated area with adequate clearance for both intake and exhaust air. Do not allow hot air exhaust to recirculate into the cold-air intake.
- The unit should always be operated in a clean, cool, well-ventilated area free of dust and debris.
- Operating personnel should avoid and never come in contact with the hot-air exhaust and/or surrounding covers during operation and for some-time after operation as these surfaces become hot and may result in a serious burn injury.
- Never bypass any blown fuse.
- Replace any indicator lamps on the operator control panel as required. Each indicator is important to the protection of the unit and safety of the operator, and is an indication of proper system operation or failure.
- Do not bypass any safety circuit including but not limited to; air-safety switch, fan motor overload, exhaust over-temperature switch.
- Always short/shunt current transformer secondary circuits when troubleshooting metering and instrumentation circuits.

- Operating personnel should not come in contact with hot air exhaust opening, outside panels, system components, and load resistors for some time after operation.

A recommended 5 minute cool down period of the blower motor circuit, with no load applied is recommended as best practice and will protect operating personnel from possible burn injuries. A 5 minute cool down should adequately remove any residual heat from the Load Bank and system components.

**Emergency Shut-Down:** The Emergency STOP pushbutton will immediately turn off control power to the load step application circuits, blower motor circuits and control/instrumentation circuits. In a controlled emergency stop condition, turn the “Master Load” switch to the “OFF” position first (allowing fan motor to run while all load steps are disconnected). Turning the “Power On” switch to the “OFF” position will then turn off all control and blower circuits. Turn off and disconnect the mainpower source under test. Disconnect all sources of power to the Load Bank (Main input load bus, blower motor circuit, and 120 VAC control circuits).

Maintenance should always be done only by qualified personnel and with all sources of power disconnected from the unit (main input load bus power, power to all blower fan and control circuits).

Always follow The National Electric Code (NEC), local electrical safety codes, and the Occupational Safety and Health Act (OSHA) when handling, installing, and operating equipment to reduce hazards, personal injury and property damage.

## 2—SAFETY SYMBOLS

### WARNING

Warning notes call attention to a procedure, which if not correctly performed could result in personal injury.

### CAUTION

Caution notes call attention to a procedure, which if not correctly performed could result in damage to the unit.



This symbol indicates that a shock hazard exists if the precautions in the instruction manual are not followed.



The caution symbol appears on the equipment indicating there is important information in the instruction manual regarding that particular area.



This symbol indicates that the unit radiates heat and should not be touched while hot.

**Note:** Calls attention to supplemental information

### 3—WARNING STATEMENTS

The following safety warnings appear in the text where there is danger to operating personnel. They are noted and repeated here for emphasis.

## WARNING

Disconnect unit from all power sources before any disassembly or service. Main input Load Bus, Blower Motor circuits, 120 VAC control circuits.

## WARNING

Do not insert a screwdriver or any thin metal objects through the perforated cooling air grilles while the load bank is in operation. The fan blade and power within the unit could cause serious injury to personnel and damage to the unit.

## WARNING

Do not remove the enclosure covers while unit is in operation or operate with covers removed. Unit will not properly cool without all covers in place and pose a shock hazard to personnel.

## WARNING

Do not touch the enclosure surfaces while the unit is in operation. Enclosure surfaces are hot and exhaust temperatures can reach in excess of 500°F when unit is under load and in operation.

## WARNING

Do not look into enclosure while in operation. Exhaust temperatures can reach temperatures in excess of 500°F when unit is under load and in operation. Dust and or debris may also be present.

## WARNING

Do not position the exhaust to blow on other equipment or material susceptible to excessive heat. Never direct exhaust air towards flammable materials.

## WARNING

Never attempt to move the unit on a ramp, incline, or any unlevelled surface as this could cause serious injury, equipment damage, and property damage.

## 4—CAUTION STATEMENTS

The following equipment cautions appear in the text whenever the equipment is in danger of damage. They are noted and repeated here for emphasis.

## CAUTION

Air enters through the bottom/side cold-air intake of the enclosure and exhausts at the top hot-air exhaust end of the enclosure. Blocking these openings will cause overheating and unit failure.

## CAUTION

Do not apply more than the rated Voltage or exceed the power rating of the Load Bank. Excessive power will damage the internal resistor banks.

## CAUTION

Confirm all control voltages before operation. Improper Voltage or OverVoltage will damage load resistors, fan motors, and control components.

## CAUTION

Confirm that all cam-lock load connections are securely attached, turned, and tightened, and that the unit is properly grounded prior to operation. Failure to do so may result in equipment damage and harm to personnel.

## CAUTION

Heavy duty caster wheels are provided for easy positioning and movement on a flat level surface only! Forklift channels are provided in the base for lifting and movement by fork lift truck on unlevelled surfaces.

## 5—LINGUAL GENERAL SAFETY STATEMENTS



### USAGE:

ANY USE OF THIS INSTRUMENT IN A MANNER NOT SPECIFIED BY THE MANUFACTURER MAY IMPAIR THE INSTRUMENTS SAFETY PROTECTION.

### USO

EL USO DE ESTE INSTRUMENTO DE MANERA NO ESPECIFICADA POR EL FABRICANTE, PUEDE ANULAR LA PROTECCIÓN DE SEGURIDAD DEL INSTRUMENTO.

### **BENUTZUNG**

WIRD DAS GERÄT AUF ANDERE WEISE VERWENDET ALS VOM HERSTELLER BESCHRIEBEN, KANN DIES GERÄTESICHERHEIT BEEINTRÄCHTIGT WERDEN.

### **UTILISATION**

TOUTE UTILISATION DE CET INSTRUMENT QUI N'EST PAS EXPLICITEMENT PRÉVUE PAR LE FABRICANT PEUT ENDOMMAGER LE DISPOSITIF DE PROTECTION DE L'INSTRUMENT.

### **IMPIEGO**

QUALORA QUESTO STRUMENTO VENISSE UTILIZZATO IN MODO DIVERSO DA COME SPECIFICATO DAL PRODUTTORE LA PROZIONE DI SICUREZZA POTREBBE VENIRNE COMPROMESSA.



### **SERVICE:**

ASERVICING INSTRUCTIONS ARE FOR USE BY SERVICE - TRAINED PERSONNEL ONLY. TO AVOID DANGEROUS ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING UNLESS QUALIFIED TO DO SO.

### **SERVICIO**

LAS INSTRUCCIONES DE SERVICIO SON PARA USO EXCLUSIVO DEL PERSONAL DE SERVICIO CAPACITADO. PARA EVITAR EL PELIGRO DE DESCARGAS ELÉCTRICAS, NO REALICE NINGÚN SERVICIO A MENOS QUE ESTÉ CAPACITADO PARA HACERLO.

### **WARTUNG**

ANWEISUNGEN FÜR DIE WARTUNG DES GERÄTES GELTEN NUR FÜR GESCHULTES FACHPERSONAL. ZUR VERMEIDUNG GEFÄHRLICHE, ELEKTRISCHE SCHOCKS, SIND WARTUNGSARBEITEN AUSSCHLIEßLICH VON QUALIFIZIERTEM SERVICEPERSONAL DURCHZUFÜHREN.

### **ENTRETIEN**

LE'EMPLOI DES INSTRUCTIONS D'ENTRETIEN DOIT ETRE RÉSERVÉ AU PERSONNEL FORMÉ AUX OPÉRATIONS D'ENTRETIEN. POUR PREVENIR UN CHOC ELECTRIQUE DANGEREUX NE PAS EFFECTUER D'ENTRETIEN SI L'ON N'A ÉTÉ QUALIFIÉ POUR CE FAIRE.

### **ASSISTENZA TECNICA**

LE ISTRUZIONI RELATIVE ALL'ASSISTENZA SONO PREVISTE ESCLUSIVAMENTE PER IL PERSONALE OPPORTUNAMENTE ADDESTRATO. PER EVITARE PERICOLOSE SCOSSE ELETTRICHE NON EFFETTUARRE ALCUNA RIPARAZIONE A MENO CHE QUALIFICATI A FARLA.

## 6—INSPECTION AND UNPACKING

As part of your safety program, an initial inspection of all equipment should occur after receiving the unit. Periodic preventative maintenance and inspections should be performed to ensure system reliability.

Upon receipt of your Load Bank, be sure to carefully unpack the unit and inspect the unit carefully for any shipping damage. Check for loose, broken or otherwise damaged parts due to shipping. If damage is noticed, do not unpack the unit. Immediately notify Trystar LLC and report any shipping damage to the freight carrier.

Be sure to verify that the part number and ratings listed on the nameplate match the order specification. ***The ratings listed on the nameplate are critical – installing, operating, and energizing the incorrect part number could damage the unit and load resistors.***

**Note:** Do not reinstall or reapply protective stretch wrap. This material is meant for shipping protection only. Prolonged storage in stretch wrap may cause condensation damage to powder coat, painted, or mill galvanized finishes.

If the unit is not damaged, unpack the equipment and remove protective stretch wrap. Remove all covers and inspect all of the components for visual signs of damage. Immediately notify the freight carrier and Trystar LLC of equipment damage or missing parts.

Reinstall packing materials for storage with exception of stretch wrap. **Do not store the unit with the protective plastic in place.**

**Note:** Do not reinstall or reapply protective stretch wrap. This material is meant for shipping protection only. Prolonged storage in stretch wrap may cause condensation damage to powder coat, painted, or mill galvanized finishes.

## 7—PRODUCT OVERVIEW

Trystar LP Series of Resistive Load Banks are portable industrial power test units designed for indoor operation. The units are designed to absorb a balanced resistive load at unity power factor.

The Load Bank is a self-contained unit that includes an Operator Control Panel which allows the user to control and monitor individual discrete load steps, blower motor circuits, control circuits, and safety circuits. Electrical energy from the power source under test is absorbed by the load bank resistors and converted into heat. The blower motor provides the necessary cooling airflow to cool the resistor load elements.

The Load Bank Unit contains all of the necessary principle system components for control and operation.

- **Load Circuits:** Including load power resistors, load step switching and main input load bus.
- **Cooling System:** Including integrally powered blower motor and controls.
- **Control Circuits:** Including 120 VAC controls, load application

circuits, blower circuits, and indicators.

- **Safety Circuits:** Including branch circuit fuse protection for load power resistor circuits, fuse protection for blower and control circuits, motor overload protection, exhaust over temperature protection, cooling air-loss protection, wrong voltage protection, load dump indication, and E-Stop.

## CAUTION

The Load Bank should never be used without the Fan Blower Motor operating. Inadequate cooling airflow will result in resistor load elements overheating, fire hazard, and danger to personnel.

## CAUTION

Never exceed the rated voltage of the unit as this will cause the Load Bank to overheat.

An AIRFLOW switch is provided to monitor the flow of cooling air through the load power resistor section of the enclosure. If there is inadequate cooling airflow, or an obstruction sensed at the air-intake or air-exhaust, all load is removed.

An Over Temperature switch is provided to monitor the temperature of the enclosure hot-air exhaust. If an over temperature condition is sensed, all load is removed.

Lower Voltages and variation in Frequency may be applied to the Resistor Load Bank load circuit (main input load bus). Frequency change causes no de-rating of the load. Application of lower voltages causes a de-rating of power (KW) from designed nameplate rating. The applied KW with a lower voltage is de-rated from its rated KW value. The actual applied KW when operated at a lower voltage is computed using the following formula:

$$kW_{\text{Applied}} = kW_{\text{Rated}} \times \frac{(\text{Voltage Applied})^2}{(\text{Voltage Rated})^2}$$

The Operator Control Panel provides the user control of the Load Bank. Main Power ON switch and indicator tell the operator control power circuits are energized and ready for operation. Blower Motor START/ STOP push buttons activate and energize the Load Bank cooling system. The Blower Power On lamp indicates blower motor is energized and in operation. Load step application circuits include individual load step switching (one switch provided for each load step). Switched load steps (KW) are additive such that the desired amount of load can be achieved. The Master Load step switch allows a preselectable amount of load to be applied when the Master Load step switch is turned on. Dual Voltage Units feature a Load Voltage Selector Switch which selects “System”

operational Voltage, a Blower Voltage Selector switch which selects blower operational voltage, and a FanPhase reversal switch for selection of fan phasing ABC – ACB.

**Definitions and Formulas**

**Definitions and Formulas:**

- KW** = Kilowatts (Watts x 1000)
- KVAR** = Kilo Volt Amperes Reactive
- HP** = Horse Power
- KW** = KVA x PF
- KVA** = KW / PF
- 1 KW** = 3412.14 BTU/Hour
- 1 HP** = .746 KW
- KVA** = Kilo Volt Amperes
- PF** = Power Factor
- BTU** = British Thermal Unit
- PF** = KW / KVA
- KVA** =  $\sqrt{KW^2 + KVAR^2}$
- $\sqrt{3}$  = 1.7321
- 1 KW** = 1.34 HP

**Volts** (L-L) is expressed as 3-phase System Voltage (Line to Line).

**Amps** is expressed as phase Amperes.

**PF** is expressed as Power Factor and is unity (1.0) in a Resistive Load Bank.

|             | <u>3 Phase</u>  | <u>Single Phase</u>   | <u>DC</u>                                      |
|-------------|---|---|--|
| <b>KW</b>   | $\frac{\text{Volts (L-L)} \times \text{Amps} \times \sqrt{3} \times \text{PF}}{1000}$ | $\frac{\text{Volts} \times \text{Amps} \times \text{PF}}{1000}$ | $\frac{\text{Volts} \times \text{Amps}}{1000}$ |
| <b>KVA</b>  | $\frac{\text{Volts (L-L)} \times \text{Amps} \times \sqrt{3}}{1000}$                  | $\frac{\text{Volts} \times \text{Amps}}{1000}$                  |  |
| <b>Amps</b> | $\frac{\text{KW} \times 1000}{\text{Volts (L-L)} \times \sqrt{3} \times \text{PF}}$   | $\frac{\text{KW} \times 1000}{\text{Volts} \times \text{PF}}$   | $\frac{\text{KW} \times 1000}{\text{Volts}}$   |
| <b>Amps</b> | $\frac{\text{KVA} \times 1000}{\text{Volts (L-L)} \times \sqrt{3}}$                   | $\frac{\text{KVA} \times 1000}{\text{Volts}}$                   |  |
| <b>HP</b>   | $\frac{\text{Volts (L-L)} \times \text{Amps} \times \sqrt{3} \times \text{PF}}{746}$  | $\frac{\text{Volts} \times \text{Amps} \times \text{PF}}{746}$  |  |

**8—THEORY OF OPERATION**

**General**

**General:**

Load Banks are precision test and measurement instruments which are designed to provide discrete, selectable, resistive electrical loads for testing mission critical power sources. They can be effectively utilized for production testing and/or periodic maintenance testing of back up (standby) generators and Uninterruptible Power Supply (UPS) systems.

**Equipment Cooling**

**Equipment Cooling:**

The power resistors used within the Load Bank are Trystar-PowerDyne™ resistor load elements situated within the “Resistor Assembly” (RA)

frame. The resistor load elements are forced air cooled and designed for continuous operation at rated voltage. When the unit is in operation, the blower motor (located at the cold-air intake end of the unit) draws cooling air into the air intake openings and forces air flow across the entire resistor bank network. Hot-air exits the unit through the hot-air exhaust opening located at the opposite end of the unit.



## WARNING

Do not look into enclosure exhaust while in operation. Exhaust temperatures can reach temperatures in excess of 500°F when unit is under load and in operation. Dust and or debris may also be present.

Trystar LP Series of Portable Resistive Load Banks are forced aircooled, high powered, compact portable units designed for indoor use. The highly efficient design and fan motor assembly provides a relatively low noise solution featuring differential air pressure and thermal monitoring over-temperature shut-down protection. Simple to operate, these units should provide years of operation yet are field repairable in the event of failure of a load resistor or other components.

## 9—ENVIRONMENTAL PARAMETERS

|                      |                            |       |
|----------------------|----------------------------|-------|
| Wind Loading:        | 75 MPH                     | Seis- |
| mic Zone Rating:     | Zone 4                     |       |
| Ambient Temperature: | -20°F to +120°F            |       |
| Altitude:            | 3,000 feet above sea level |       |

- The equipment is intended for indoor installation and operation. The surrounding air must be free of contaminants or particles that could be drawn into the air intakes.
- The Resistor Load Bank Unit and resistors are fan forced-air cooled, and have no intermediate dielectric fluids, and require no cooling water hookups.
- Careful consideration to surrounding equipment is required as hot-air exhaust temperatures can be in excess of 500°F when the unit is operated under full load.
- The unit should be placed in an open air environment where adequate space is available for air circulation. Do not enclose the unit in a small confined area with obstructions, or with nearby equipment in close proximity to the cold-air intake or hot-air exhaust. A minimum of 3-4 feet of clearance should be provided for cold-air intake and 10-12 feet of clearance at hot-air exhaust. A minimum of 36 inches of clearance should be provided for equipment maintenance on each side of the enclosure. Never vent cold-air intake or hot-air exhaust. (Refer to Safety section of this manual).



## WARNING

Do not touch the enclosure surfaces while the unit is in operation. Enclosure surfaces are hot and exhaust temperatures can reach in excess of 500°F when unit is under load and in operation.

## 10—EQUIPMENT INSTALLATION

### Equipment Placement and Location

### Equipment Placement and Location:

- Diligent care is required for proper installation of the Load Bank. The National Electric Code, all local installation codes, all electrical and safety codes, Occupational Safety and Health Act codes (OSHA) are required to be followed when installing this equipment to reduce any hazards to persons, personal property, and injury to any installation and operating personnel.
- Failure to follow installation guidelines will void the warranty.
- Installation, hook-up and operation should only be done by certified, qualified, licensed contractor technicians, which are trained and familiar with installation practice, operation of Load Banks and industrial electrical equipment.
- Prior to equipment placement and installation, inspect the Load Bank for any enclosure damage, broken wires, cracked or broken ceramic insulators, or any other component damage that may have occurred during shipment. Immediately report any damage claims to the freight carrier and contact the factory.
- Do not install the Load Bank where standing water can accumulate. Installation should be above grade.
- The unit is equipped with locking casters and should always be utilized for equipment placement prior to start-up and operation. Never attempt to move the load bank on a ramp, incline or any unlevelled surface.
- The Load Bank must be operated in a cool well ventilated open area where hot-air exhaust cannot be recirculated to the cold-air intake. Hot-air exhaust can exceed 500°F when operated under full load conditions.
- The enclosure should be mounted on a level and solid surface with a minimum clearance of 36 inches on each side of the enclosure for service and maintenance. A minimum of 3-4 feet of clearance should be provided for cold-air intake and 10-12 feet of clearance at hot-air exhaust.
- The hot-air exhaust should blow to open air with no restrictions, redirection, or threat to personnel or other equipment.
- Never vent the cold-air intake or hot-air exhaust.

**Note:** This Resistor Load Bank is designed for indoor use. Due to heat produced and generated during operation, careful consideration should always be taken when operated in close proximity to any other industrial equipment. Hot-air exhaust can damage temperature sensitive equipment up to 15 feet from hot-air exhaust.

**Note:** All clearances are recommended factory minimums. Clearances less than specified should be discussed with the factory prior to installation.

**Note:** The enclosure is portable and on casters for ease of positioning. The unit is designed to be lifted from the base. Fork-Lift channels are provided in the base for ease of lifting. Locking casters are provided to secure the unit in place during operation.

**Note:** To avoid damage to the enclosure and internal components, do not lift the enclosure in any manner with covers removed.

**Note:** This Resistor Load Bank is designed for indoor use. Due to heat produced and generated during operation, careful consideration should always be taken when operated in close proximity to any other industrial equipment. Hot-air exhaust can damage temperature sensitive equipment up to 15 feet from hot-air exhaust.

**Note:** All clearances are recommended factory minimums. Clearances less than specified should be discussed with the factory prior to installation.

## CAUTION

Air enters through the cold-air intake sides of the enclosure and exhausts at the hot-air exhaust at the opposite end of the enclosure. Blocking these openings will cause overheating and unit failure.

**Note:** The enclosure is portable and on casters for ease of positioning. The unit is designed to be lifted from the base. Fork-Lift channels are provided in the base for ease of lifting. Locking casters are provided to secure the unit in place during operation.

**Note:** To avoid damage to the enclosure and internal components, do not lift the enclosure in any manner with covers removed.

### Equipment Mounting

### Equipment Mounting:

## CAUTION

Heavy duty caster wheels are provided for easy positioning and movement on a flat level surface only! Forklift channels are provided in the base for lifting and movement by fork lift truck on unlevelled surfaces.

## CAUTION

Never attempt to move the unit on a ramp, incline, or any unlevelled surface as this could cause serious injury, equipment damage, and property damage.

- The unit is equipped with four (4) casters located on the base of the unit for easy positioning and moving. After proper placement, always utilize and activate the locking casters to secure the unit in place.

### Power Connection Considerations

### Power Connection Considerations:

## CAUTION

Not utilizing the locking casters while unit is in place could cause the unit to roll, causing damage or harm to other equipment and/or personnel.

Reference the Electrical Schematic and Electrical-Mechanical Ratings section of this manual for the Total Power Ratings of; Main Input Load Bus (KW, Voltage, Phase, Frequency), Blower Motor Circuit Ratings, and Control Circuit Ratings.

Load cable conductors from the power source to the load bank should be adequately sized and protected to handle the maximum rated load, and in accordance to the National Electric Code and any local codes.

In order to adequately protect the conductors to the Load Bank, an approved, lockable, and properly sized main circuit breaker and/or disconnect switch should be mounted as close to the power source as possible. Always refer and adhere to National Electric Code and any local codes.

### Load Power Connections

#### Load Power Connections:

- Load connections from the power source under test are made to the respective color coded Cam-Lok power receptacles located on the bottom front of the Load Bank enclosure. Cam-Lok Power connectors are color coded for safety and ease of phase identification. [BLACK = A Phase] [RED = B Phase] [BLUE = C Phase] [GREEN = Equipment Ground]
- Cam-Lok Power Connectors are rated 400 Amps and should be derated not to exceed 350 Amps per conductor. Do not exceed cable runs of 200 feet.
- Quality solid cable connections are critical for conductivity and load sharing.
- Load test cables must always be of same conductor rating and equal length.
- Never bundle multiple cables in parallel with the same phase together.
- Always run multiple parallel conductors in groups with Phase (A-B-C) together.

### Grounding

#### Grounding:

An uninterrupted and approved earth ground must be supplied from the main power source which in turn must be connected to a solid earth ground. The ground connection at the load bank is made to the "Green" Cam-Lok receptacle on the bottom front of the enclosure. Serious injury or death can occur if this grounding is not properly supplied. Grounding of this equipment should be done by qualified personnel only and must be installed in accordance with all applicable National Electric Code, local electrical codes, and regulations.

The ground conductor must be sized and connected to the Load Bank enclosure per the National Electric Code and any local codes. The ground connection at the load bank is made to the “Green” Cam-Lok receptacle on the bottom front of the enclosure which is provided for this connection. The Load Bank receptacle ground terminal must be solidly connected to both the power source frame and in turn, connected to solid earth ground.

## Blower and Control Power Connections

### Blower and Control Power Connections:

- Blower Motor requires a 3-phase power source that can be derived internally from the main input load bus (source under test), or from an external power source.
- Internal/External blower power is selected by the connection of the “blower power terminal plug” P2 to the terminal block receptacle jack J2A - [internal blower power], or to the terminal block receptacle jack J2B - [external blower power]. Location is within the load bank relay panel compartment. Reference Electrical Schematic.
- The Blower Motor circuit consists of a motor starting relays for energizing the blower motor. Short circuit protection for the motor circuit is provided by fast acting current limiting fuses and thermal protection by overload relays.
- If the load bank is provided with a dual voltage blower motor circuit, a “Blower Voltage” selector switch is provided on the operator control panel.
- A Fan-Phase reversal switch is provided for phase selection ABC or ACB.
- The Load Bank Control circuits require 120 Volt AC, 1-phase, 60 Hertz power for proper operation of load bank controls, instrumentation, and safety circuits. A 15 foot detachable power line cord with mating plug is provided with the Load Bank. Connect the power cord mating plug to the Load Bank receptacle first (located on the bottom of the unit), and then connect the power cord to a grounded 120 VAC, 1-phase, 60 Hertz source.
- Control Power Transformer: If the unit is provided with a control power transformer, the line cord for external 120 VAC control power is not necessary and is not provided. Control power is derived internally from the blower motor power circuit which is either connected to the main input load bus for internal power connection or to the external power connection terminal block.
- Blower Motor circuits, Control circuits, Load Circuits, Instrumentation circuits, and Safety circuits are branch circuit fuse protected.
- Reference Electrical Schematic for blower motor and control circuit power ratings, as well as location and size of blower circuit fuses, motor overloads, control circuit fuses, instrumentation and safety circuit fuses.

## Operator Controls

### Operator Controls:

The Load Bank is supplied with an integral Operator Control Panel that is utilized for local control and monitor of the Load Bank control circuits,

## Multi-Power Meter

**Note:** Always short/shunt current transformer secondary circuits when servicing or troubleshooting metering and instrumentation circuits. Primary current flowing through an un-shunted open secondary of a current transformer will destroy the current transformer with possible danger and harm to personnel.

**Note:** Complete details, functions, and operation of the MultiPower Meter are described in the supplemental Multi-Power Meter Quick Start Guide supplied as part of the Appendix of this Load Bank Manual.

load application circuits, instrumentation/metering circuits, blower circuits, and safety circuits.

### Multi-Power Meter:

If the Load Bank Operator Control unit is supplied with a multi-function MultiPower Meter Display, all meter input wiring for Voltage and Current is factory complete within the Load Bank. With the Load Bank in operation and under load, the Multi-Power Meter allows the operator to monitor, measure, display, and record electrical load parameters such as 3-Phase System Volts, Phase Amperage, Frequency, and Power Functions.

- Voltage inputs are sensed from the main input load bus and are fuse protected wired direct to the meter.
- Current Transformers are located within the Load Bank enclosure and sense primary phase current. Secondary connections are made direct to the meter.
- Reference Electrical Schematic for terminal locations and fuse location of metering/instrumentation circuit.

**Note:** Always short/shunt current transformer secondary circuits when servicing or troubleshooting metering and instrumentation circuits. Primary current flowing through an un-shunted open secondary of a current transformer will destroy the current transformer with possible danger and harm to personnel.

**Note:** Complete details, functions, and operation of the MultiPower Meter are described in the supplemental Multi-Power Meter Quick Start Guide supplied as part of the Appendix of this Load Bank Manual.

## CAUTION

Confirm all external blower and control voltages before operation. Over or under voltage will damage blower and control components.

## CAUTION

Confirm all main input load bus and ground connections are properly connected, turned, and tightened. Confirm external blower and control power connections. Loose connections will result in damage and danger to personnel.

## 11—OPERATING INSTRUCTIONS

### General

#### General:

- All installation should be reviewed and checked by a qualified technician with all local and National Electric codes observed.
- Ensure all connections are properly tightened and all covers are installed.
- Never operate the unit un-attended.
- All wiring from external power sources to Load Bank Unit (including; main input load bus, blower motor circuits, and 120 VAC control circuits) should be verified and checked by a qualified technician with all local and National Electric codes observed.
- The following Cautions and Warnings should be strictly enforced:

### CAUTION

Operation of the unit with any covers removed will disrupt air flow and allow debris to pass through resistors possibly damaging equipment.

### WARNING

Operation of the unit with any covers removed will pose a shock hazard and danger to personnel.

### WARNING

Do not look into the exhaust of the enclosure while in operation. Exhaust temperatures can reach temperatures in excess of 500°F when unit is under load and in operation. Dust and or debris may also be present.

### WARNING

Do not touch the enclosure surfaces while the unit is in operation. Enclosure surfaces are hot and exhaust temperatures can reach in excess of 500°F when unit is under load and in operation.

## WARNING

Do not insert a screwdriver or any thin metal objects through the perforated cooling air grilles while the load is in operation. The power within the unit could arc over and will cause serious injury to personnel and damage to the unit.

## WARNING

Do not operate under load without fan blower in motion. Immediate equipment damage may result.

### Operation

#### Operation:

- Select/Connect proper Blower Voltage, Internal/External Blower Power, and Control Power as reviewed and described in the Installation section of this manual.
- Connect the power source under test to main input load bus as described in the Installation section of this manual.
- Verify – Check Emergency Stop Button is in the “Closed” operating position.
- Verify – Check Blower Voltage Selector Switch is in the proper position (dual voltage units).
- Verify – Check the Load Voltage Selector Switch is in the proper position and matches the System Voltage applied to the Load Bank main input load bus terminals (dual voltage units).
- With Operator control panel switches in the OFF position, place Control Power switch to the ON position (control power on indicator will illuminate).
- Press Blower Start push button. Blower Power indicator will illuminate. When blower fan motor reaches proper speed, the air-flow failure indicator will deenergize.

**Note:** Ensure and check for proper airflow, blower motor and direction of airflow from cold-air intake out of the hot-air exhaust.

**Note:** Ensure and check for proper airflow, blower motor and direction of airflow from cold-air intake out of the hot-air exhaust.

## CAUTION

DO NOT operate the Load Bank over rated nameplate Voltage as this will cause catastrophic failure.

The operation of the blower motor circuit is critical for safe operation. If the air-flow failure and/or over-temp lamp is illuminated, all load steps are disabled and load cannot be applied.

DO NOT attempt to bypass the air switch or overtemperature switch as this will cause catastrophic damage to the unit.

- With Master Load and KW load step switches in the OFF position, pre-select a KW load using one or any additive combination of load step increments by turning the switches to the ON position.
- Turning the Master Load step switch to the ON position, the pre-selected amount of load KW will be applied to the power source under test.
- Any available combination of incremental KW load values can be turned ON/OFF during operation to achieve the desired load on the power source under test.
- Shut-Down: Turn the “Master Load” switch, and all load step switches to the “OFF” position first (allowing fan motor to run while all load steps are disconnected). Press the Blower STOP push button. Turning the “Power On” switch to the “OFF” position will then turn off all control and blower circuits. Turn off and disconnect the main-power source under test. Disconnect all sources of power to the Load Bank (Main input load bus, blower motor circuit, and 120 VAC control circuits).
- A recommended 5 minute cool down period of the blower motor circuit, with no load applied, should adequately remove any residual heat from the Load Bank and system components.

## WARNING

DO NOT touch the exhaust louver during operation.

Hot-Air exhaust will cause serious burns

DO NOT allow objects to enter or block air intake or exhaust louvers.

DO NOT operate the Load Bank over rated nameplate Voltage as this will cause catastrophic failure and danger to personnel.

DO NOT apply DC voltages to main input load bus. Refer to Safety section of this manual.

## Safety and Shut-Down Indicators

### Safety and Shut-Down Indicators:

- “Emergency Stop” Pushbutton disables 120 VAC control power to all control circuits (blower circuit, load application circuit, instrumentation, control and safety circuits).
- “Air-Failure” lamp indicates a loss of cooling airflow (all load is removed).
- “Over-Temperature” indicates an exhaust over-temp condition (all load is removed).
- “Wrong Voltage” indicates Load Voltage Selector Switch does not match System Voltage applied to main input load bus terminals (load steps disabled).
- “Load Dump” indicates removal of all loads due to one or all of the above conditions.
- “Motor Overload” lamp indicates motor thermal overload and motor shut-down.

## 12—MAINTENANCE

Maintenance personnel must always exercise caution when access panels are removed. Personal injury from electrical shock or from moving fan blades could result unless all sources of power are completely disconnected before servicing. Maintenance must always be done by qualified technician.

Maintenance procedures must be followed to provide longevity of equipment life, and to reduce the probability of electric shock hazard, fire, personal injury, or property damage.

Before servicing this equipment, completely review the “**Safety Points**” and “**Potentially Hazardous Operator Conditions**” sections of this manual. Maintenance must always be done by a qualified and certified technician. Proper protective arch-flash clothing, eye protection, ear protection, gloves, and hard-hat should be worn when servicing or maintaining the unit.

### **WARNING**

Disconnect from all sources of power to the unit (Main input Load Bus, external Blower Power, External Control Power) prior to any inspection, service, or cleaning. Electric Shock Hazard exists while connected.

For optimum performance and service life, preventative maintenance is a key factor. It is recommended that during scheduled inactiveness, reactivation from storage, or unit relocation the following maintenance steps are performed:

**Daily Maintenance Prior to Operation:**

1. Inspect and remove any restrictions and/or obstructions to cold-air intake and hot-air exhaust of the Load Bank unit.
2. Check screens to make sure objects have not blocked/entered openings.
3. Verify the direction of the airflow is in the proper direction from cold-air intake to hot-air exhaust.
4. Verify that there is no possibility of re-circulation of hot-air exhaust to cold-air intake.

**Quarterly Maintenance (every three months):**

1. Remove all exterior access panels to Load Bank enclosure (including air intake and exhaust covers).
2. Inspect the intake and exhaust covers. Blow or brush away any noticeable dirt or debris from air intake and exhaust openings. Ensure covers are functional and free of debris. Replace any respective panel that is compromised or damaged.
3. Clean any and all dirt and/or debris from the interior of the entire Load Bank. Do not exceed 40 PSI when using clean, dry, compressed air for blowing and removing dust and debris.
4. Inspect blower motor and fan blade, clearing any debris or removing any obstruction. Check fan blade for balance and all respective fan blade and motor mounting hardware for tightness. Torque to proper values of tightness as required.
5. Inspect all resistor elements ensuring all hardware is tightened and elements are clear and free of debris.
6. Inspect all resistors for mechanical and structural integrity and location. Replace any excessive sagging resistor elements, ceramics and support rods. Replace any and all broken or cracked termination ceramics, and ceramics on resistor support rods as required.
7. Inspect all termination ceramic insulators at resistor case ends (both sides) for breaks or cracks and replace as necessary.
8. Inspect all support rod ceramic insulators for breaks or cracks and replace as necessary.
9. Inspect the entire inside of the enclosure for loose hardware or loose connections and tighten to proper torque values as required.
10. Inspect all load and control wiring for signs of insulation failure or breakdown.
11. Inspect for any signs of heat stress on connections and terminals. This could be a sign of loose hardware or corroded/oxidized connections. Repair and replace connection hardware as required.
12. Inspect all electrical connections to terminal blocks, main input load bus bars, fuses mounted to bus bars, Cam-Lok power receptacle connections, all resistor connections for corrosion and oxidation. Clean connections and replace hardware as required. Tighten as necessary.
13. Inspect all load step contactors. Inspect magnetic contactor coils for

oxidation and rust. Inspect contacts that carry load if pitted, rusted or corroded. Contacts must all move freely and properly seal when closed. Replace as necessary.

14. When replacing current transformers, mark all leads before removing to ensure proper phasing of new current transformer. Never leave the secondary of a current transformer un-shunted.
15. Reinstall all covers ensuring all materials are well in place and all hardware is properly tightened.
16. Verify Airflow protection circuit. This can be done when unit is powered up for operation with all access panels closed and in place, and blocking off the cold-air intake and/or hot-air exhaust.
17. Check all indicator lamps on Operator Control unit (replace as necessary).
18. Blower motor should be lubricated per manufacturer's requirements as noted on motor nameplate.

## CAUTION

Do not pressure wash the inside component terminal compartment (relay panel) as damage may occur to electro-mechanical load step relays, motor and control circuits, safety circuits, and terminal strip wiring. If splashed, ensure entire compartment is dry before covering.

## WARNING

Pressure washing terminal compartment (relay panel) may lead to condensation and promote internal arcing.

### Additional Preventative Maintenance Measures (as required):

1. The outside surface of the unit should be wiped or blown free of dust and dirt. Careful consideration to controls, metering and relay compartment must be taken into account when pressure washing the exterior of the enclosure. Ensure air intake and exhaust areas are clean and debris free. Blast or sand any noticeable corrosion areas and cover with a suitable paint or coating.
2. Remove both side access panels and ensure all resistor terminal connections including wire, bus jumper, and bushings are tightened to 50 ft/lb. Inspect all ceramic bushings and insulators for cracks. Replace all broken or cracked ceramic insulators. Ensure all fan and safety component connections are tight. If required, it is safe to blow any dust from this compartment using 40 PSI or less of clean, dry, compressed air. Replace any broken or failed components. Reinstall access panel cover before proceeding with any enclosure maintenance.

3. If resistor elements are extremely dirty, elements can be pressure washed. Pressures up to 400 PSI at a distance of two feet or greater may be used when cleaning the resistor elements. Pressure should be reduced for the connection points and the distance from the nozzle to any insulator should not be closer than four feet to prevent damage.

## 13—TROUBLESHOOTING GUIDE

### **WARNING**

Disconnect all sources of power to the unit (Main input Load Bus, external Blower Power, External Control Power) prior to any inspection, service, or cleaning. Electric Shock Hazard exists while connected.

**Note:** When checking fuses for continuity, remove all fuses from fuse blocks, bus bars, fuse holders, and disconnect switch. Test each fuse individually and out of circuit. A blown fuse left in the circuit may check out OK with false reading of continuity due to feedback and return paths within the circuit.

For corrections requiring repair or replacement of components, contact the factory immediately for further instruction. Only those functions within the scope of normal maintenance are listed. This manual cannot list all malfunctions that may occur, or corrective actions. If a malfunction is not listed or is not corrected by listed corrective actions, notify the factory.

**Note:** When checking fuses for continuity, remove all fuses from fuse-blocks, bus bars, fuse holders, and disconnect switch. Test each fuse individually and out of circuit. A blown fuse left in the circuit may check out OK with false reading of continuity due to feedback and return paths within the circuit.

#### 1. No Main Power to 120 VAC Control Circuits

- Emergency Stop / “E-STOP” push button is in the open position.
- Terminals damaged during shipment.
- External Control Power Main Switch or circuit breaker is not closed.
- Control Power Transformer failure (primary or secondary control power fuse is blown (check and replace as required)).
- Control Circuit Fuse is blown (check and replace as required).
- Dirty or loose connections or faulty Main Power Switch.

#### 2. No Main Power to 120 VAC Control Circuits

- No External Power to Motor Circuits.
- Main Power switch is in the off position.
- Emergency Stop / “E-STOP” push button is in the open position.
- External Blower/Control Power Main Switch or circuit breaker is not closed or power source is disconnected.

- Blower Motor is internally wired to main input load bus with no main input load bus voltage applied.
  - External power source is inadequate.
  - Loose or broken connection at terminal block, motor starter, motor starting coil or on operator control unit (main power, blower start/stop pushbuttons).
  - Blower Motor fuse is blown (check and replace as required).
  - Motor Over-Load relay is tripped.
  - Motor starting relay failed.
  - Fan blade obstruction, motor winding failure, or shaft does not turn to improper lubrication.
- 3. Blower Motor Circuit energized but Fan Blade is not turning**
- Fan blade motion is obstructed or broken.
  - Fan blade is loose at hub or is not keyed properly.
- 4. Air Failure Lamp Illuminated**
- Obstruction or restriction of air flow at Load Bank cold-air intake or hot-air exhaust.
  - Blower motor phasing is incorrect causing rotation of fan blade and wrong direction of cooling air flow. Check motor power connections for proper phase sequence.
  - Exhaust over-temperature switch is activated. Sign of resistor over-temperature. Verify and ensure air intake and exhaust openings are clear of any debris, blockage or obstruction. Check for proper blower operation and proper direction of airflow.
  - Air switch or Air failure auxiliary relay is malfunctioning or not operating correctly.
  - Air switch high pressure intake tubing obstruction. Remove, clean and replace tubing as necessary.
- 5. Over-Temp Lamp Illuminated**
- Obstruction or restriction of air flow at Load Bank cold-air intake or hot-air exhaust.
  - Blower motor phasing is incorrect causing rotation of fan blade and wrong direction of cooling air flow. Check motor power connections for proper phase sequence.
  - Airflow switch is activated indicating a loss of cooling airflow. Sign of resistor over-temperature. Verify and ensure air intake and exhaust openings are clear of any debris, blockage or obstruction. Check for proper blower operation and proper direction of airflow.
  - Over-Temp switch or Over-Temp auxiliary relay is malfunctioning or not operating correctly.
  - Air switch high pressure intake tubing obstruction. Remove, clean and replace tubing as necessary.

**6. Wrong Voltage Lamp Illuminated (dual voltage units)**

- Load Voltage Selector Switch is in the wrong position.
- Load Voltage Selection does not match the applied System Voltage sensed at main input load bus terminals.
- Wrong Voltage Relay (K-VCR) failure or R100 dropping resistor failure/open.

**7. Load Dump Lamp Illuminated**

- Indication that all load steps are removed due to Air-Failure, Over-Temp, Wrong Voltage, Motor Overload condition, or motor shut down condition.

**8. Motor Overload Lamp Illuminated**

- Motor Thermal Overload Relay tripped. Check ambient air intake temperature and for re-circulation of hot air. Motor windings running hot. Blower motor winding failure (replace if necessary). Reset Overload relay.

**9. Resistor Open or Phase Imbalance**

- Blown load step fuse in branch load circuit (check and replace as necessary).
- Loose bus bar or loose connection at resistor terminal or fuse (tighten all bus bar and connection points as required).
- Resistor element failure and burned open (replace as necessary).

**10. Load Step or Load step application circuit cannot be energized**

- Blower Failure, Air failure, Over-Temp, Wrong Voltage, Motor Overload, Load Dump, (see item 2 thru 8 above).
- Master Load Step switch is in the OFF position or not functioning.
- Load Step toggle switch is inoperative.
- One or more of the branch circuit load step fuses for the load step in question is blown (check and replace as necessary).
- One or more of the load step resistor for the load step in question has failed or burned open (check and replace as necessary).
- Load step contactor has failed or is inoperative due to loose connection or failed-open coil.

**11. Load Step energized without rated load, or un-balanced load**

- Applied main input bus voltage from power source under test is derated, low, imbalanced or inadequate.
- Contactor failure or not closing properly. Loose connection.
- One or more of the branch circuit load step fuses for the load step in question is blown (check and replace as necessary).
- One or more of the load step resistor for the load step in question has failed or burned open (check and replace as necessary).

**Note:** When checking fuses for continuity, remove all fuses from fuse blocks, bus bars, fuse holders, and disconnect switch. Test each fuse individually and out of circuit. A blown fuse left in the circuit may check out OK with false reading of continuity due to feedback and return paths within the circuit.

## 12. Load Step contactor or relay chattering

- Contacts are pitted or oxidized.
- Magnetic core and coil are dirty or corroded.
- Coil connections to the contactor are loose.
- 120 VAC control circuit line voltage is low and/or inadequate.

## 13. Switchgear Circuit Breaker trips or Main Disconnect fuses are blown

- Fuses and/or circuit breaker trip settings are undersized.
- A short circuit exists at the Load Bank Resistor (main input load bus or blower circuit).
- A short exists in the power conductors feeding the Load Bank Resistor.

**Note:** When checking fuses for continuity, remove all fuses from fuse blocks, bus bars, fuse holders, and disconnect switch. Test each fuse individually and out of circuit. A blown fuse left in the circuit may check out OK with false reading of continuity due to feedback and return paths within the circuit.

## 14—STORAGE

- It is recommended that the unit be stored indoors in a dry enclosed area. There is no special preparation required.
- If the unit is to be unused or stored for any length of time indoors, cover the unit to prevent any accumulation or buildup of dust or dirt. Do not store the unit outdoors.
- Storage temperatures should remain -22°F to +122°F [- 30°C to +50°C]

## 15—SHIPPING

- Attach the enclosure to a skid constructed with minimum board thickness of two inches (2”) to properly support the unit’s weight, and properly secure the load bank to the mounting skid.
- Secure all loose parts in the bottom of the enclosure and reinstall cover.
- Pack, seal securely in a sturdy wooden crate or equivalent, with sufficient padding to avoid shock damage.
- If returning to the factory, a factory Return Merchandise Authorization (RMA) Number will be required prior to shipment or may be refused at the dock.

## 16—CUSTOMER SERVICE

Any maintenance or service procedure beyond scope of those provided in this manual should be referred to a factory engineer. All units returned for service must be shipped prepaid and to the attention of the factory engineer in which return and service were discussed with RMA number noted.

**Contact Information:**

15765 Acron Trail

Faribault, MN 55021

507.333.3990

## 17—WARRANTY

**TRystAR LOAD BANKS PRODUCTS:** The Company warrants title to the product(s) and, except as noted below with respect to items not bearing the Trystar load banks brand, also warrants the product(s) on date of shipment to Purchaser, to be of the kind and quality described, merchantable, and free of defects in workmanship and material. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES FROM THE COMPANY OR THE MANUFACTURER, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, AND CONSTITUTES THE ONLY WARRANTY WITH RESPECT TO THE PRODUCT(S) AND NO OTHER WARRANTY IS GIVEN WHICH EXTENDS BEYOND THE DESCRIPTION ON THE FACE OF THE COMPANY'S QUOTATION OR ACCEPTANCE FORM. This warranty shall remain in effect for a period of one (1) year from date of initial operation or eighteen (18) months from date of shipment, whichever is earlier. This warranty shall be null and void if Purchaser makes any alterations, additions, modifications or improvements to the product(s).

**DISCLAIMER OF WARRANTY, OTHER PRODUCTS:** ANY SEPARATELY LISTED ITEM OF THE PRODUCT(S) WHICH IS NOT A TRYSTAR LOAD BANKS BRANDED PRODUCT IS NOT WARRANTED BY THE COMPANY, and shall be covered only by the express warranty, if any, of the manufacturer thereof. As between Purchaser and the Company, such products are sold AS IS, and Company makes no warranties, express or implied, as to any matter whatsoever, including, without limitation, THE CONDITION OF THE EQUIPMENT, ITS MERCHANTABILITY, ITS DESIGN, ITS CAPACITY, ITS PERFORMANCE, ITS MATERIAL, ITS WORKMANSHIP, AND ITS FITNESS FOR ANY PARTICULAR PURPOSE. COMPANY DISCLAIMS ANY LIABILITY WHATSOEVER FOR LOSS, DAMAGE, OR INJURY TO PURCHASER OR THIRD PARTIES AS A RESULT OF ANY DEFECTS, LATENT OR OTHERWISE, IN A PRODUCT NOT MANUFACTURED BY COMPANY, AND COMPANY SHALL NOT BE LIABLE IN ANY EVENT FOR ANY LOSS, DELAY, OR DAMAGE OF ANY KIND OR CHARACTER RESULTING FROM DEFECTS IN, OR INEFFICIENCY OF, PRODUCTS NOT MANUFACTURED BY TRYSTAR. NO OTHER WARRANTY IS GIVEN EXTENDING BEYOND

THE DESCRIPTION ON THE FACE OF THE COMPANY’S QUOTATION OR ACCEPTANCE FORM. The Company will in respect of such goods use reasonable efforts to pass on to the Purchaser the benefit of any guarantee provided by the manufacturer or supplier of such goods but not so as to impose on the Company any liability in respect thereof.

## 18—ELECTRICAL AND MECHANICAL RATINGS

Always refer to the Load Bank Nameplate and Electrical Schematic included with this manual for specific rating information. The most common part numbers are listed below. Model and part number is listed on the Load Bank Nameplate.

| Trystar Part Number               | Power Rating (KW) | Voltage (VAC) | Amps per phase | Load Step Res | Motor Watt | Airflow CFM | SPL dB(A) |
|-----------------------------------|-------------------|---------------|----------------|---------------|------------|-------------|-----------|
| <a href="#">LP400-240-480-10M</a> | 400               | 240/480       | 962/481        | 10            | 3          | 12000       | 84        |
| <a href="#">LP400-480-10M</a>     | 400               | 480           | 481            | 10            | 3          | 12000       | 84        |
| <a href="#">LP400-600-10M</a>     | 400               | 600           | 385            | 10            | 3          | 12000       | 84        |
| <a href="#">LP500-240-480-10M</a> | 500               | 240/480       | 1202/601       | 10            | 5          | 15000       | 82        |
| <a href="#">LP500-480-10M</a>     | 500               | 480           | 601            | 10            | 5          | 15500       | 82        |
| <a href="#">LP500-600-10M</a>     | 500               | 600           | 481            | 10            | 5          | 15500       | 82        |
| <a href="#">LP600-240-480-10M</a> | 487.5/600         | 240/480       | 1173/722       | 10            | 5          | 15000       | 82        |
| <a href="#">LP600-480-10M</a>     | 600               | 480           | 722            | 10            | 5          | 15000       | 82        |
| <a href="#">LP600-600-10M</a>     | 600               | 600           | 577            | 10            | 5          | 15000       | 82        |
| <a href="#">LP700-480-25M</a>     | 700               | 480           | 842            | 25            | 7.5        | 18000       | 84        |
| <a href="#">LP850-240-480-5M</a>  | 600/850           | 240/480       | 1022/1443      | 5             | 10         | 20000       | 86        |
| <a href="#">LP1000-480-10MT</a>   | 1000              | 480           | 1202           | 10            | 10         | 20000       | 86        |
| <a href="#">LP1000-600-10MT</a>   | 1000              | 600           | 962            | 10            | 10         | 20000       | 86        |

**Sound Pressure [SPL db(A)]:** Sound Pressure Level is all octave band frequencies at a distance of 10 feet, using a propagation of 1/8 spherical. Sound data is calculated and should be used as a guideline only.

[ M ] Denotes unit comes equipped with Digital Power Meter.

**Single Phase Operation:** Power Rating (KW), will de-rate by 50% when operated phase-phase at rated single phase voltages, and will provide up to 66% of rated load when single phase voltages are applied across all three phases.

**Blower Motor Circuit Ratings:** Blower Motors at 3 HP and above are 3-phase motors that can operate internally off the main input load bus or from an external power source.

**Control Power Circuit Ratings:** 120 Volts AC, 1-phase, 60 Hertz, 10 Amps

**Operating Temperature:** -20°F to +120°F [-29°C to +49°C]

**Enclosure Dimensions:** 33.5"W x 48.5"D x 62.5"H [850 x 1230 x 1590 mm]

**Approximate Weight:** 800 - 900 pounds [360 - 410 kg]

**LP1000 Dimensions:** 33.5"W x 48.5"D x 76.5"H [850 x 1230 x 1945 mm]

**LP1000 Weight:** 1350 pounds [610 kg]

**Enclosure Finish:** Power Coat Paint Finish

## 19—SPECIFICATIONS

**Type:** Portable Indoor Resistive Load Bank, Unity (1.0) Power Factor.

**Duty Cycle:** Forced Air-Cooled, rated for continuous operation.

**Cooling System:** Integrally mounted blower motor with high-performance, direct-driven fan blade delivers the required airflow volume (CFM) for cooling resistor load elements. Blower Motors at 3 HP and above are 3-phase motors that can operate internally off the main input load bus or from an external power source.

**Control Power:** External 120 Volt AC, 1-phase, 60 Hertz source. Detachable line cord provided.

[ T ] Denotes integral control power transformer which delivers the necessary 120 Volt AC, 1-phase, 60 Hertz power required for control circuit operation. Control power transformer is wired to blower motor circuit and is primary and secondary fuse protected.

**Local Operator Control Panel:** Emergency Stop (E-Stop) push button, Main Power On/Off switch, Blower Start/Stop push buttons, Fan-Phase Reversal switch (ABC-OFF-ACB), Master Load On/Off switch and individual Load Step Switches (KW On/Off) provided for each load step. Illuminated indicators provided for Power On, Blower On, Motor Overload, Air-Flow Failure, OverTemperature, Load Dump. Dual Voltage units feature Blower Voltage Selector switch (208-240, Center-Off, 440-480), Load Voltage Selector Switch (208-240, CenterOff, 440-480), and Wrong Voltage applied indicator.

[ M ] **Digital Power Meter:** Fully equipped, 3-phase Digital Power Metering System that measures a standard range of 16 load parameters. Includes RS485 (Modbus protocol) for remote reading - compatible with PC, PLC, and data loggers.

See additional details at: <http://www.multitek-ltd.com/HTMs/M800/M850.htm>

### Operator Protection and Safety Features:

- A Control Power Emergency-Stop (E-STOP) push button is provided to disable control power voltage to all operator control power circuits, including blower circuit and load application circuits.
- Operator control panel provides detection and display of Main Power On, Blower Motor On, Motor Overload, Air-Flow Failure,

Over-Temperature, and Load Dump. Wrong Voltage Applied (dual voltage units only).

- Branch circuit fuse protection provides short-circuit fault protection of all load steps. Fuses are fast-acting, current-limiting type with an interrupting rating of 200K A.I.C.
- Blower Motor is short-circuit protected by current-limiting fuses and thermally protected by overload relay.
- A differential air pressure switch provides protection from loss of cooling air or insufficient airflow. The switch automatically removes all load if an airflow problem is detected. Load cannot be reapplied until sufficient airflow is present.
- An over-temperature switch is provided to monitor load bank exhaust temperature. The switch automatically removes all load if an over-temperature condition is detected. Load cannot be reapplied until the overtemperature condition is corrected.
- Dual Voltage units feature an operator wrong voltage protection circuit is provided to prevent application of load if 480 VAC is detected with the Load Voltage selector switch in the 240 VAC position.
- Operator warning and caution statements are located on appropriate access panels.

**TRYPSTAR-PowerDyne™** Resistor load elements provide the necessary KW load rating for each load step. PowerDyne™ Resistors are fully supported across their entire length within the air stream by stainless steel support rods which are insulated with heavy-duty, high-temperature ceramic insulators. Change in resistance is minimized by maintaining conservative resistor designs.

**Construction:** The load bank is constructed of galvanized steel with powder coat paint finish, and is designed for operation indoors on a flat, level surface with sufficient volume of fresh intake air available. Cooling airflow is drawn from the screened air-intake sides, with hot air vertically exhausted from the top of the unit away from personnel. The exhaust should be positioned to minimize hot air recirculation into the load bank air-intake. Heavy-duty caster wheels are provided for easy positioning and moving.

**Quick-Connect-Disconnect** of customer load cable provided by fully rated “industry exclusive” Cam-Lok power connectors. Connectors are color-coded for safe and easy phase identification. Protective snap-back covers provide added safety during storage and operation.

## 20—PARTS LIST

The parts list in this section contains the description and part number of the typical parts used in each of the principle load bank circuits. It is intended to be used as a guide along with the electrical schematic to simplify troubleshooting and the repair process. Cross reference the electrical schematic designator with the actual parts and part numbers used within the load bank to ensure accuracy as specifications are subject to change without notice. Always refer to the Load Bank Nameplate and Electrical Schematic included with this manual for specific rating information. Contact factory for direct assistance. See Load Bank Nameplate for specific model number, part number, and serial number.

| BLOWER CIRCUIT | DESCRIPTION                                    | PART NUMBER |
|----------------|--|-------------|
| B1             | BLOWER MOTOR, 3 HP, 208-230/460 VAC, 3-PHASE   | EM3611T     |
| O/L 1          | RELAY, OVERLOAD                                | XTOE005CCSS |
| F110, 111, 112 | FUSE, CLASS J, 600V, 15 AMP                    | AJT15       |
| B1             | BLOWER MOTOR, 5 HP, 208-230/460 VAC, 3-PHASE   | EM3615T     |
| O/L 1          | RELAY, OVERLOAD                                | XTOE020CCSS |
| F110, 111, 112 | FUSE, CLASS J, 600V, 20 AMP                    | AJT20       |
| B1             | BLOWER MOTOR, 5 HP, 575 VAC, 3-PHASE           | EM3615T-5   |
| O/L 1          | RELAY, OVERLOAD                                | XTOE020CCSS |
| F110, 111, 112 | FUSE, CLASS J, 600V, 10 AMP                    | AJT10       |
| B1             | BLOWER MOTOR, 7.5 HP, 208-230/460 VAC, 3-PHASE | EM3710T     |
| O/L 1          | RELAY, OVERLOAD                                | XTOE020CCSS |
| F110, 111, 112 | FUSE, CLASS J, 600V, 15 AMP                    | AJT15       |
| B1             | BLOWER MOTOR, 10 HP, 208-230/460 VAC, 3-PHASE  | EM3714T     |
| O/L 1          | RELAY, OVERLOAD                                | XTOE020CCSS |
| F110, 111, 112 | FUSE, CLASS J, 600V, 20 AMP                    | AJT20       |

|                        |   |                    |
|------------------------|---|--------------------|
| K110, K111, K113-K115  | CONTACTOR, MOTOR STARTER,<br>3-POLE,          | XTCE015B10A        |
| K112                   | RELAY, DPDT, 120 VAC COIL                     | W92S11A22D-120     |
| P2                     | PLUG, 3-POSITION                              | 1969386            |
| J2A, J2B               | RECEPTACLE, 3-POSITION                        | 1922640            |
|                        |   |                    |
| <b>SAFETY CIRCUITS</b> | <b>DESCRIPTION</b>                            | <b>PART NUMBER</b> |
| S61 (O/T) OVERTEMP     | THERMAL SWITCH                                | 3L03-190           |
| S51 (AS) AIR SWITCH    | DIFFIRENTIAL AIR PRESSURE SWITCH              | AFS-262-379-B      |
|                        | FITTING, BULKHEAD, 1/4" FEMALE<br>ADAPTER     | B-400-71-4         |
|                        | FITTING, ADAPTER STRAIGHT<br>THERMO           | SS-400-1-4         |
| K99, K100, K101, K102  | RELAY, DPDT, 120 VAC COIL                     | W92S11A22D-120     |
| K-VCR                  | RELAY, VOLTAGE CONTROL                        | DUR-110A           |
| R100                   | RESISTOR, 100 K OHM, 1 W                      | OA104K             |
| F107-F108              | FUSE, CLASS CC, 600V, 1A                      | ATQR1              |
|                        |   |                    |
| <b>CONTROL CIRCUIT</b> | <b>DESCRIPTION</b>                            | <b>PART NUMBER</b> |
| F103                   | FUSE, CLASS CC, 600V, 10 AMP                  | ATDR10             |
| XF103                  | FUSE HOLDER                                   | GPM-SRR            |
| S2, E-STOP             | PILOT DEVICE, SWITCH, PUSHBUT-<br>TON "ESTOP" | M22-DRP-R-GB99     |
| S1, MAIN POWER SWITCH  | PILOT DEVICE, SWITCH, ILLUM,<br>GREEN         | M22-WLKV-G         |
| S1, MAIN POWER ON      | PILOT DEVICE, LIGHT, GREEN,<br>90-260VAC      | M22-LED230-G       |
| S3, BLOWER START/STOP  | PILOT DEVICE, SWITCH, PUSHBUT-<br>TON, DOUBLE | M22-DDL-GRGB1-GBO  |
| S3, BLOWER ON          | PILOT DEVICE, LIGHT, WHITE,<br>90-260VAC      | M22-LED230-W       |

|                             |  |                    |
|-----------------------------|--|--------------------|
| S1,S3 MAIN POWER/BLOWER     | PILOT DEVICE, SWITCH, CONTACT, NO          | M22-K10            |
| S2,S3, ESTOP/BLOWER         | PILOT DEVICE, CONTACT, NC                  | M22-K01            |
| S4-BLOWER VOLT SELECT       | PILOT DEVICE, SWITCH, SELECTOR             | M22-WRK3           |
| S4-BLOWER VOLT SELECT       | PILOT DEVICE, SWITCH, CONTACT, NO          | M22-K10            |
| VOLT SELECT, FAN REVERSE    | SWITCH, TOGGLE, DPDT (ON-OFF-ON)           | 7992K10            |
| LOAD STEP SWITCH'S          | SWITCH, TOGGLE, 250V, 16A (SPDT)           | 92B3802            |
| M/O,O/T,A/F,LD,WV           | PILOT DEVICE, INDICATOR, RED,<br>90-260VAC | M22-L-R-230R       |
|                             |  |                    |
| <b>POWER METERING</b>       | <b>DESCRIPTION</b>                         | <b>PART NUMBER</b> |
| M1                          | PILOT DEVICE, METER, MULTIPOWER            | M850-JB69          |
| F107-F109                   | FUSE, CLASS CC, 600V, 1A                   | ATQR1              |
| CT1, CT2                    | CURRENT TRANSFORMER, 1000:5                | ND-1000-TT-MB      |
| CT1, CT2                    | CURRENT TRANSFORMER, 1200:5                | ND-1200-TT-MB      |
|                             |  |                    |
| <b>LOAD STEP CONTACTORS</b> | <b>DESCRIPTION</b>                         | <b>PART NUMBER</b> |
|                             | CONTACTOR, 3-POLE, 15/20 AMP, 600<br>VAC   | XTCE015B10A        |
|                             | CONTACTOR, 3-POLE, 15/20 AMP, 600<br>VAC   | C25DND315A         |
|                             | CONTACTOR, 3-POLE, 25/35 AMP, 600<br>VAC   | C25DND325A         |
|                             | CONTACTOR, 3-POLE, 30/40 AMP, 600<br>VAC   | C25DND330A         |
|                             | CONTACTOR, 3-POLE, 40/50 AMP, 600<br>VAC   | C25DNF340A         |
|                             | CONTACTOR, 3-POLE, 50/65 AMP, 600<br>VAC   | C25DNJ350A         |
|                             | CONTACTOR, 3-POLE, 60/75 AMP, 600<br>VAC   | C25FNF360A         |
|                             | CONTACTOR, 3-POLE, 75/90 AMP, 600<br>VAC   | C25FNF375A         |

|                         |   |                    |
|-------------------------|---|--------------------|
|                         | CONTACTOR, 3-POLE, 90/120 AMP, 600 VAC  | C25GNF390A         |
|                         | CONTACTOR, 3-POLE, 120/140 AMP, 600 VAC | C25HNE3120A        |
|                         | CONTACTOR, 3-POLE, 200/200 AMP, 600 VAC | C25KNE3200A        |
|                         |   |                    |
| <b>LOAD STEP FUSES</b>  | <b>DESCRIPTION</b>                      | <b>PART NUMBER</b> |
|                         | FUSE, CLASS T, 70 AMP, 600 VAC          | A6T70              |
|                         | FUSE, CLASS T, 80AMP, 600 VAC           | A6T80              |
|                         | FUSE, CLASS T, 100 AMP, 600 VAC         | A6T100             |
|                         | FUSE, CLASS T, 125 AMP, 600 VAC         | A6T125             |
|                         | FUSE, CLASS T, 150 AMP, 600 VAC         | A6T150             |
|                         | FUSE, CLASS T, 175 AMP, 600 VAC         | A6T175             |
|                         | FUSE, CLASS T, 200 AMP, 600 VAC         | A6T200             |
|                         |   |                    |
| <b>POWER CONNECTORS</b> | <b>DESCRIPTION</b>                      | <b>PART NUMBER</b> |
| W1                      | CONNECTOR, RECEPTACLE, THRU-STUD, BLACK | E1016-1600S        |
| W2                      | CONNECTOR, RECEPTACLE, THRU-STUD, RED   | E1016-1602S        |
| W3                      | CONNECTOR, RECEPTACLE, THRU-STUD, BLUE  | E1016-1612S        |
| W4                      | CONNECTOR, RECEPTACLE, THRU-STUD, GREEN | E1016-1604S        |
| XW1                     | CONNECTOR, SNAP BACK COVER, BLACK       | E1016SC-32         |
| XW2                     | CONNECTOR, SNAP BACK COVER, RED         | E1016SC-36         |
| XW3                     | CONNECTOR, SNAP BACK COVER, BLUE        | E1016SC-34         |
| XW1 (REF)               | CONNECTOR, PLUG, FEMALE, BLACK          | E-Z1016-8387       |
| XW2 (REF)               | CONNECTOR, PLUG, FEMALE, RED            | E-Z1016-8389       |

|                     |   |                    |
|---------------------|---|--------------------|
| XW3 (REF)           | CONNECTOR, PLUG, FEMALE, BLUE                     | E-Z1016-8393       |
| XW4 (REF)           | CONNECTOR, PLUG, FEMALE, GREEN                    | E-Z1016-8391       |
|                     |   |                    |
| <b>MISCELANEOUS</b> | <b>DESCRIPTION</b>                                | <b>PART NUMBER</b> |
| XF107-F108          | FUSE, FUSE BLOCK, 2 POLE                          | 30312R             |
| XF107-F109          | FUSE, FUSE BLOCK, 3 POLE                          | 30313R             |
| XF110-F112          | FUSE, FUSE BLOCK, 3 POLE                          | 60308SJ            |
|                     | TERMINAL BOARD, 3P, 30A                           | 6ZEJO              |
|                     | TERMINAL BLOCK, END BLOCKS                        | 20635116           |
| J1                  | CONNECTOR, INLET RECEPTACLE, TWISTLOCK, 15A, 125V | HBL4716C           |
| P1                  | CONNECTOR, PLUG, TWIST-LOCK, FEMALE, 15A, 125V    | HBL4729-C          |
| XP1                 | CABLE & WIRE, POWER CORD, 13A, 125V, 14 AWG, 15FT | 17425-S2-10        |
|                     |   |                    |
| P10                 | CONNECTOR, PLUG, 22 PIN                           | 39-01-2221         |
| J10                 | CONNECTOR, RECEPTACLE, 22 PIN                     | 39-01-2220         |
| P11                 | CONNECTOR, PLUG, 24 PIN                           | 39-01-2241         |
| J11                 | CONNECTOR, RECEPTACLE, 24 PIN                     | 39-01-2240         |
| P12                 | CONNECTOR, PLUG, 10 PIN                           | 39-01-2101         |
| J12                 | CONNECTOR, RECEPTACLE, 10 PIN                     | 39-01-2100         |
| XP10,XP11, XP12     | CONNECTOR, TERMINAL, PIN, #16 AWG, CRIMP          | 46012-3142         |
| XJ10,XJ11, XJ12     | CONNECTOR, TERMINAL, SOCKET, #16 AWG CRIMP        | 45750-3112         |
|                     |   |                    |

| CONTROL TRANSFORMER | DESCRIPTION                          | PART NUMBER |
|---------------------|--------------------------------------|-------------|
| T1                  | TRANSFORMER, 500 VA, 240/480:120 VAC | E500        |
| F102                | FUSE, TIME DELAY, 500 V, 10 AMP      | ATQ10       |
| F100, F101          | FUSE, CLASS CC, 600 VAC, 10 AMP      | ATQR10      |
| XF100-F101          | FUSE, FUSE BLOCK, 2 POLE             | 30312R      |
|                     |                                      |             |
| T2                  | TRANSFORMER, 50 VA, 480:240 VAC      | 9070T50D12  |
| F104                | FUSE, 1/2 AMP, 250 VAC               | AGC-1/2     |
| XF104               | FUSE BLOCK                           | 9070AP3     |
| K-UVR               | UNDER VOLTAGE RELAY                  | DSR220      |
| K480                | RELAY                                | XTCE015B10B |
| K240                | RELAY                                | XTCE015B10A |
| XK480, XK240        | CONTACT BLOCK                        | XTCEXFAC22  |
|                     |                                      |             |
| T1                  | TRANSFORMER, 500 VA, 600:120 VAC     | E500JN      |
| F102                | FUSE, TIME DELAY, 500 V, 8 AMP       | ATQ8        |
| F100, F101          | FUSE, CLASS CC, 600 VAC, 4 AMP       | ATQR4       |
| XF100-F101          | FUSE, FUSE BLOCK, 2 POLE             | 30312R      |
| F103                | FUSE, CLASS CC, 600V, 8 AMP          | ATDR8       |

## 21—APPENDIX – DRAWINGS AND MULTI-POWER METER QUICK START GUIDE

### Proprietary

The Dimensional Outline Drawings, Electrical Schematics and Interconnection Drawings included with this manual are the property of Trystar LLC, and shall remain so while in user's possession. The information is provided for the instruction, operation, maintenance and service of this equipment and not to be used for manufacturing or procurement of equipment from any source other than Trystar LLC. The technology shown here is strictly proprietary and is not to be disclosed to any 3<sup>rd</sup> party without prior consent and the express written permission of Trystar LLC.

**Note:** If Load Bank Part Number is not listed in the Electrical and Mechanical Ratings table of this manual, it is a custom engineered to order product. The part number specific electrical schematic and top level bill of material included with this manual should always be used for specific rating information and as the reference parts list.

- Multi-Power Meter Quick Start Guide
- Load Bank Dimensional Outline Drawing
- Load Bank Electrical Schematic and Interconnection Drawing

**Note:** If Load Bank Part Number is not listed in the Electrical and Mechanical Ratings table of this manual, it is a custom engineered to order product. The part number specific electrical schematic and top level bill of material included with this manual should always be used for specific rating information and as the reference parts list.

***Always refer to the Load Bank Nameplate and Electrical Schematic included with this manual for specific rating information. Load Bank Model, Part Number, and Serial Number are listed on the Load Bank Nameplate.***

